

# FXA-2014-B Universal Landing Gear Installation



1. Installation of the universal landing gear requires fabrication of additional brackets to attach the assembly to the motorcycle.
2. The legs of the landing gear can be removed for polishing or painting.
3. The bike needs to be fitted with an instant-up kit to provide an air supply to the system.
4. Tee into the air tank line and mount the control valve.
5. Operation: With the bike in the up position, press and hold the landing gear push button. At the same time, press the rear air ride down button and lower the bike onto the landing gear. Release both buttons. The landing gear is spring loaded, so when the rear air ride comes up, the legs will automatically retract to the up position.
6. Below is an installation example on a GSXR1000



**\*\*\*\*\* WARNING \*\*\*\*\***

**THIS SYSTEM MAY USE THE FULL TRAVEL OF THE SUSPENSION. THE INSTALLER IS RESPONSIBLE FOR THE PROPER INSTALLATION. LOSS OF AIR PRESSURE WILL RESULT IN THE SUSPENSION MOVING TO IT'S LOWEST POSITION. THE INSTALLER IS RESPONSIBLE TO VERIFY THE SAFETY OF THE APPLICATION. IMPROPER INSTALLATION COULD RESULT IN DAMAGE TO THE MOTORCYCLE AND COULD CAUSE SERIOUS INJURY OR DEATH.**



[jschwindt@airfxusa.com](mailto:jschwindt@airfxusa.com)

800-210-1454